

Imprinter Battery Installation

1. Press in and then up on the battery tray.
2. Spring pressure will push the battery tray out.
3. Install the battery as shown in the photo below, wide terminal into wide slot.

